










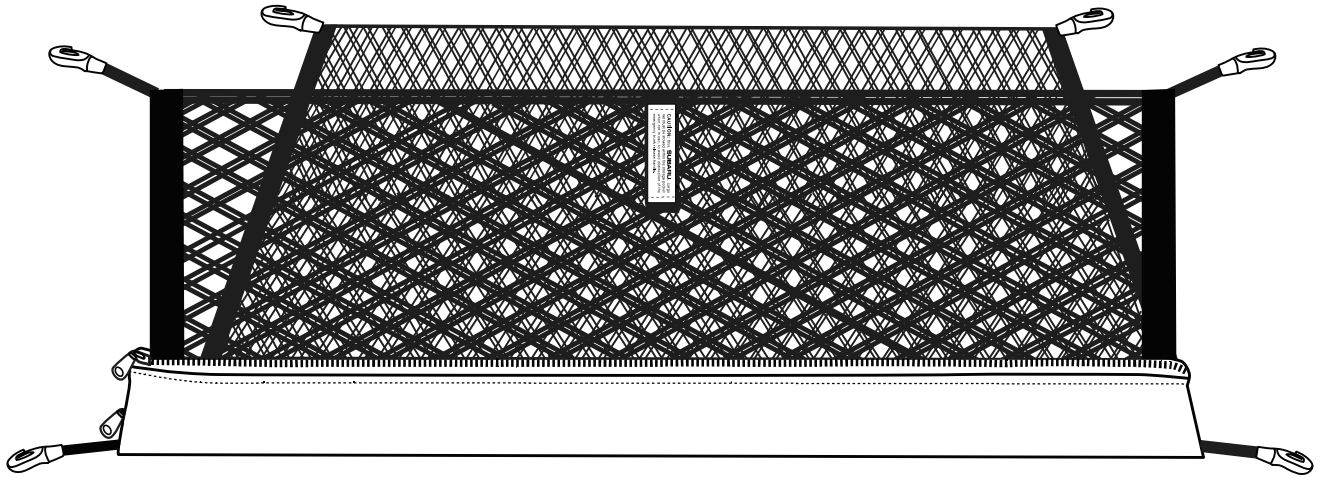


A KIT CONTENTS:

1X




TOOLS REQUIRED: NONE


Meaning of Characters:


-  : Remove
-  : Install
-  : Disconnect
-  : Connect
-  : Location of pre-arranged mark
-  : Driver side rear cargo area
-  : Passenger side rear cargo area
- T** : Tightening Torque
-  : Loosen
-  : Discard
-  : Recyclable
-  : View

NOTE: Installation steps shown below are for the drivers side of the vehicle.
Please follow the same steps for the passengers side.


1 Locate anchor points.

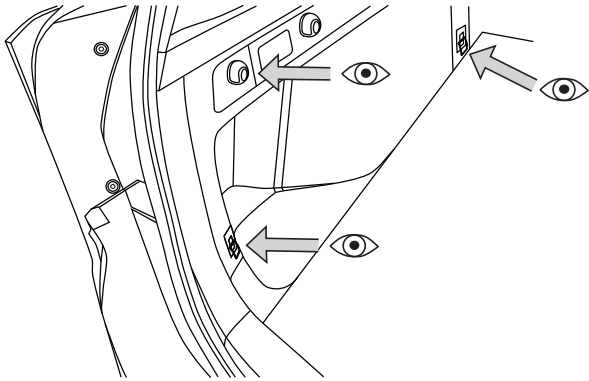



2  Unzip forward zipper and install floor net.

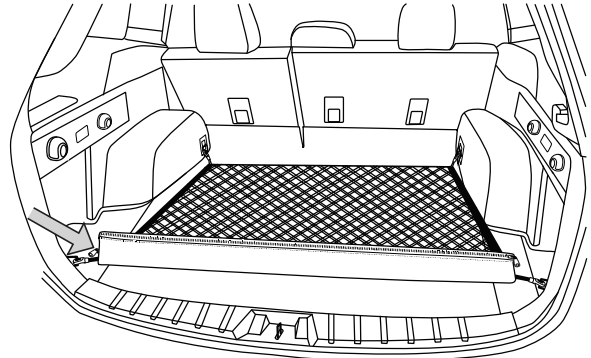



3  Unzip top zipper and install vertical net.

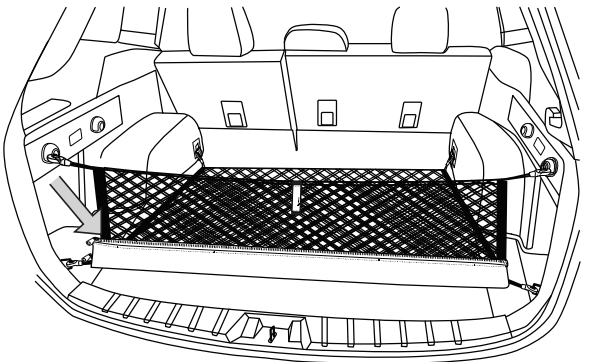

4  Net Stowed

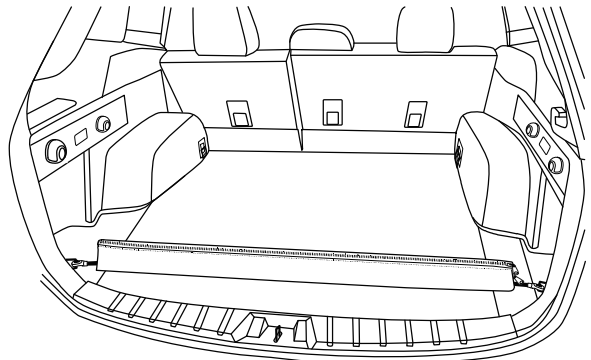


NOTE: Either net can be installed independently.

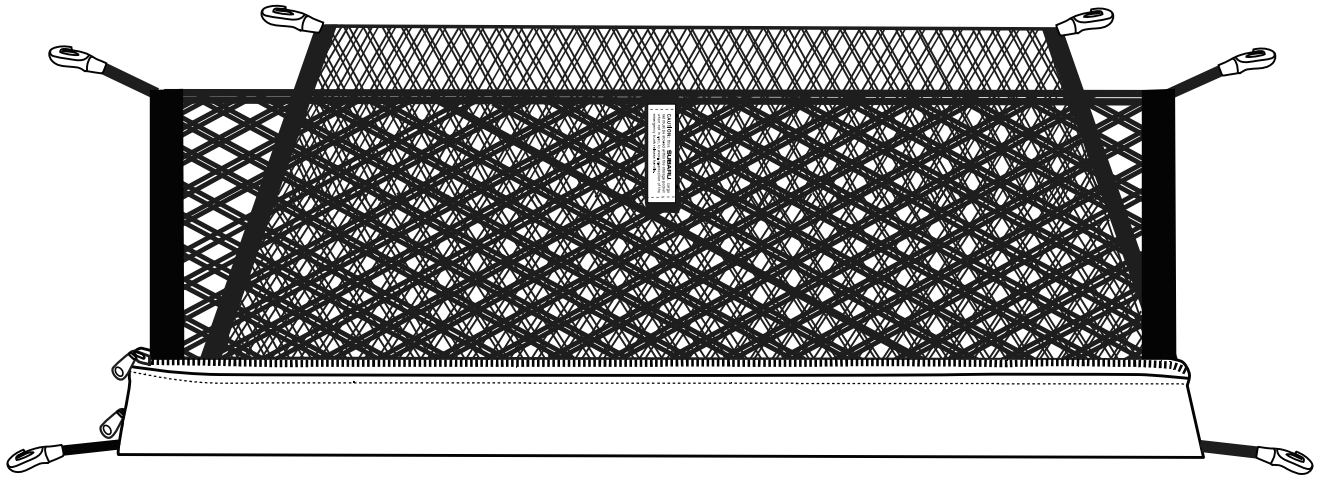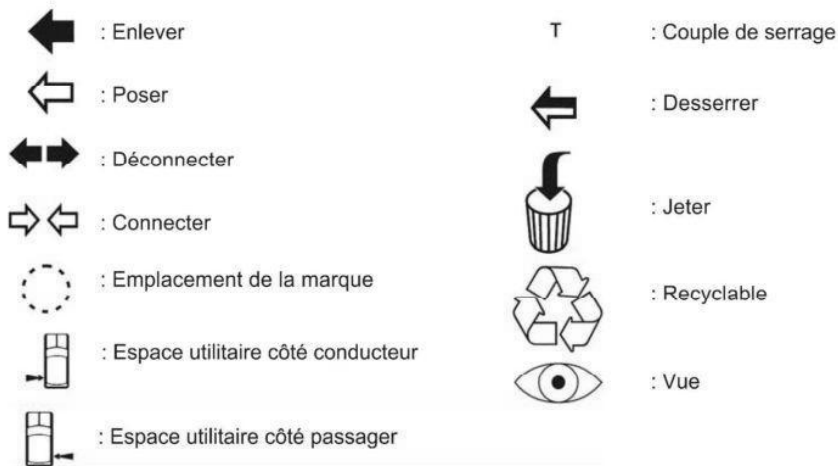
A CONTENU DU KIT:**1X****OUTILS REQUIS: AUCUN****Signification des symboles:**

Remarque: Les opérations d'installation sont identiques pour l'autre côté du véhicule.


1 Localiser les points d'ancrage.

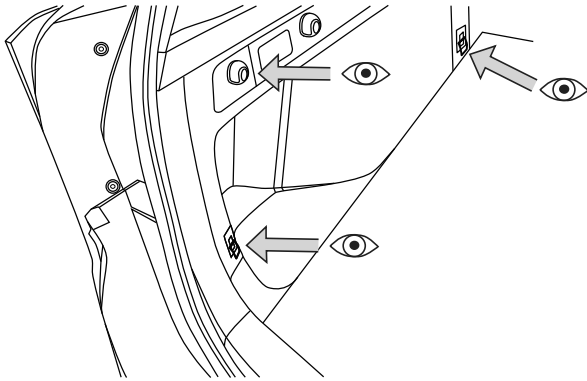


2 Ouvrir la fermeture éclair avant et installer le filet de retenue du plancher.

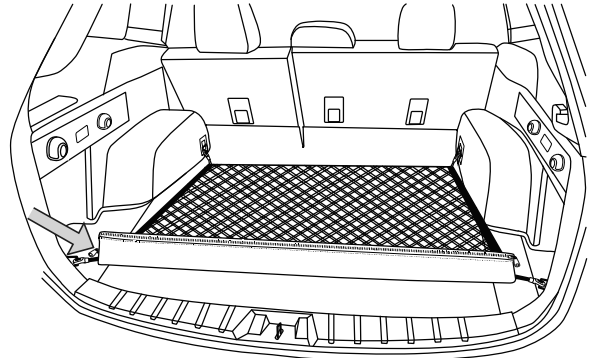

3 Ouvrir la fermeture éclair supérieure et installer le filet de retenue vertical.

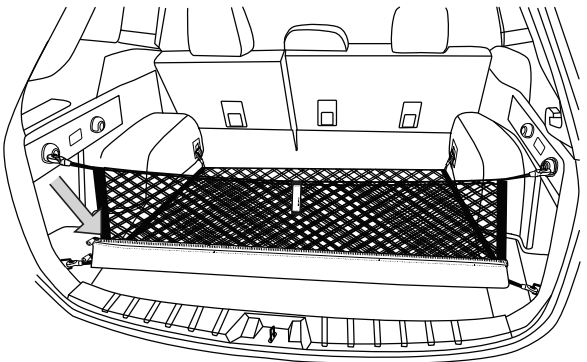

4 Filet rangé.

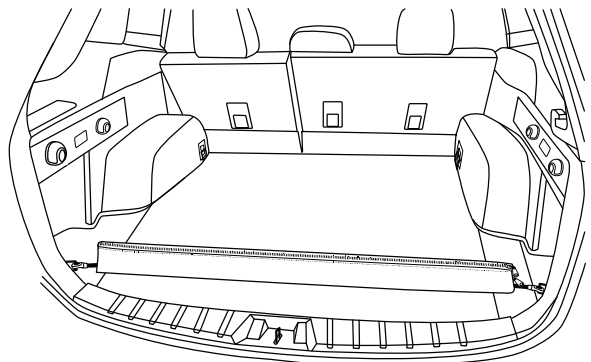

Remarque : Les filets peuvent être installés indépendamment l'un de l'autre.