









**INSTALLATION  
INSTRUCTIONS**

DESCRIPTION: Outback Wagon

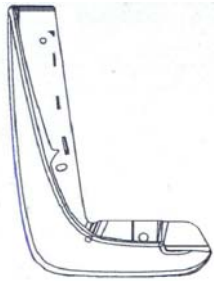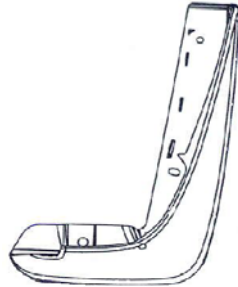Splash Guard Kit

**KIT CONTENTS:**


PAGE 1/2

<p><b>A</b></p>  <p>FR RH Splash Guard 1X</p>	<p><b>B</b></p>  <p>FR LH Splash Guard 1X</p>		
<p><b>C</b></p>  <p>RR RH Splash Guard 1X</p>	<p><b>D</b></p>  <p>RR LH Splash Guard 1X</p>		
<p><b>E</b></p>  <p>Bolt with Washer 8X</p>	<p><b>F</b></p>  <p>Plastic J-Nut 6X</p>	<p><b>G</b></p>  <p>Sheet Metal J-Nut 2X</p>	<p><b>H</b></p>  <p>Screw Rivet 2X</p>


**TOOLS REQUIRED:**



**MEANING OF CHARACTERS:**




**1**

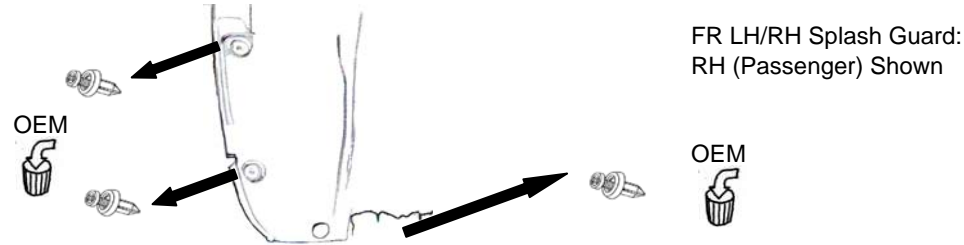

FR LH/RH Splash Guard:  
RH (Passenger) Shown

For Front Splash Guards remove Screw Rivets and discard. It may be helpful to use a small flat head screw driver to dislodge the screw.


**2**



Insert Metal J-clip onto sheet metal behind the top hole.  
Insert the plastic J-Clip behind the lowest hole.


Lift the mud guard to slide J-Nuts behind holes.

3

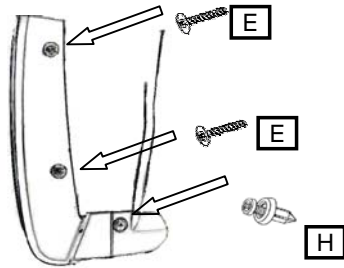

Line up Front Splash Guard with existing holes and insert Screw Rivet from Hardware Kit into bottom hole. Insert Bolt with Washer into lower hole and tighten. Adjust Front Splash Guard to fit flush to exterior of vehicle body and insert and tighten the Bolt with Washer for the last (top) hole. Tighten bolts to  $10 \pm 2$  in-lbs ( $1.1 \pm 0.2$ N-m)


4

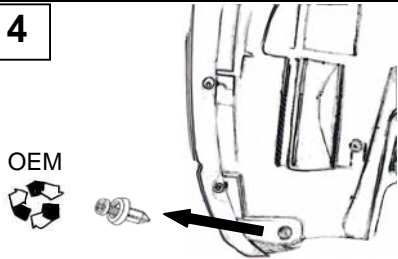

RR LH/RH Splash Guard:  
RH (Passenger) Shown


For Rear Splash Guards remove Screw Rivet and KEEP for REINSTALLATION.

5

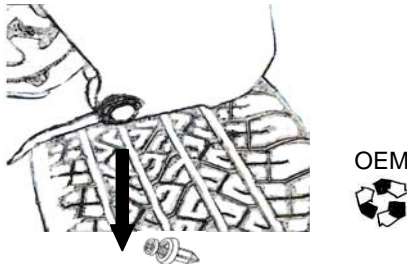


Remove screw rivet from (underside) rear and KEEP for REINSTALLATION.

6

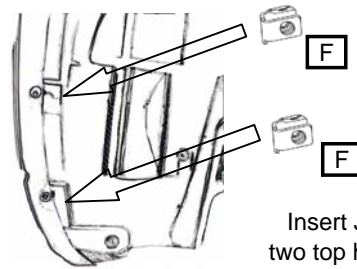


Insert J-Nuts behind the two top holes.

7

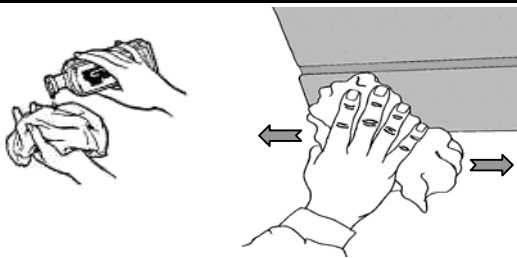


Clean body where splash guard attaches with cloth and alcohol.

8

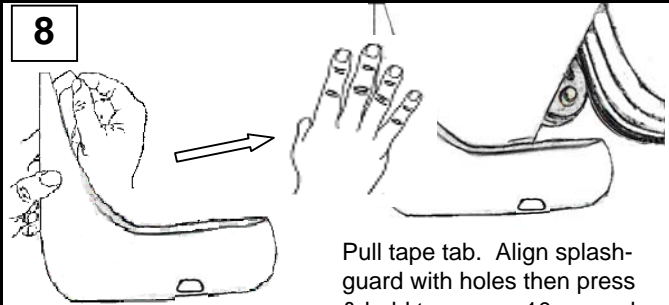


Pull tape tab. Align splash-guard with holes then press & hold tape area 10 seconds.

9

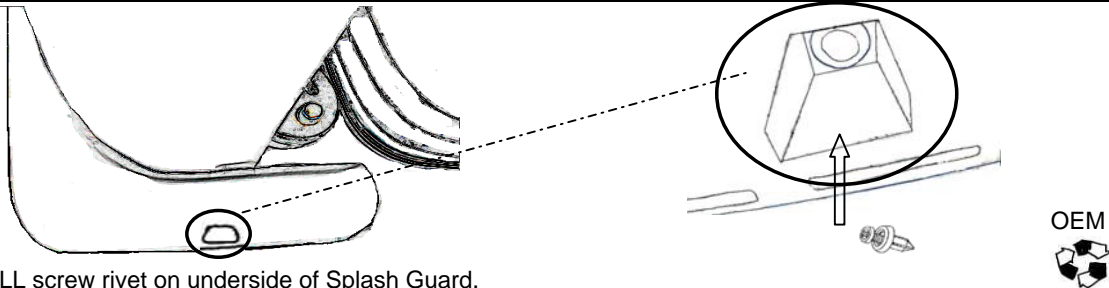

REINSTALL screw rivet on underside of Splash Guard.

10

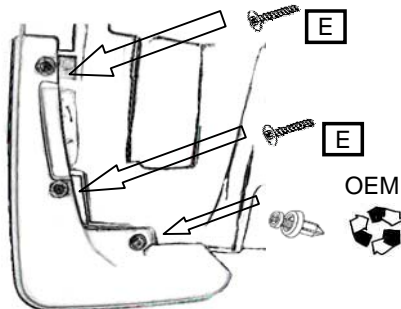

REINSTALL the OEM Screw Rivet. Insert and tighten the Bolt with Washer to lower hole of Rear Splash Guard. Adjust to fit flush to exterior of body and insert and tighten the Bolt with Washer for the last (top) hole. Tighten bolts to  $10 \pm 2$  in-lbs ( $1.1 \pm 0.2$ N-m)