



Rear Gate Inset Lettering Handling Manual Installation Manual

For Customers

Thank you very much for purchasing a genuine Subaru Rear Gate Inset Lettering.

REQUESTS

1. Before using this product, please read this manual and always handle the product in an appropriate manner.
2. Please keep these instructions on hand at all times.
3. To avoid mistakes during installation, please have this product installed at a Subaru dealer or at a shop designated by a Subaru dealer.

⚠ Precautions for Handling

1. If the product gets dirty, do not attempt to clean it using hard objects such as a scrub brush or wax containing compounds (polishing powder), as this may damage the surface. Wipe with a cloth dampened with water, then wipe with a soft, dry cloth.

For Installation Personnel

This manual describes how to install and handle the Rear Gate Inset Lettering.

REQUESTS

1. Be sure to read this manual prior to installation to ensure proper installation of this product.
2. After installation of this product is complete, be sure to give this manual to the customer.

⚠ Precautions for Installation

1. Before installing the Rear Gate Inset Lettering, switch off the vehicle's ignition and securely apply the parking brake.
2. Before installation, wipe off any dirt, oil, etc. from the vehicle in the area where the product will be installed.
3. Working in cold temperatures (15° C or below) will reduce the adhesive strength of the Rear Gate Inset Lettering. Warm the Rear Gate Inset Lettering and the installation surface with a dryer before affixing the Rear Gate Inset Lettering.
4. Make sure the Rear Gate Inset Lettering is securely affixed.
5. Refrain from washing the vehicle for 24 hours after installing the Rear Gate Inset Lettering, as this may cause it to peel off. In the event of rainy weather, store the vehicle in a place where it will not be exposed to rain.

Tools Used

Cleaning agent, cloth, resin ruler

The cleaning agent should be alcohol-based (IPA: isopropyl alcohol) or nonane.


Revision Details

△	Description	Date

Component Names


No.	Item Name	J1210SL100	J1210SL110
①	Rear Gate Inset Lettering	1	1

①

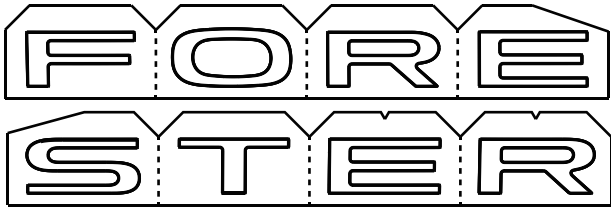


Before Installing the Lettermark


① Among the letters that make up “FORESTER”, there are two each of the letter “R” and the letter “E”. To prevent incorrect placement of the letters, a notch has been cut into the application film and release paper of the second “E” and “R” to distinguish them from the other letters.

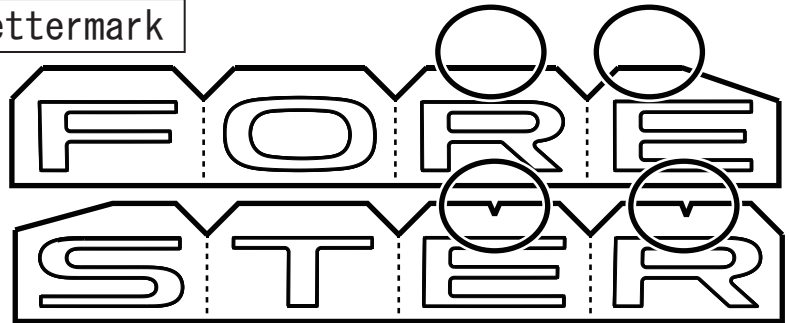

② The composition of the ① Rear Gate Inset Lettering is shown in the diagram on the right. The application film is used when installing the Rear Gate Inset Lettering on the vehicle and should not be removed prior to installation.

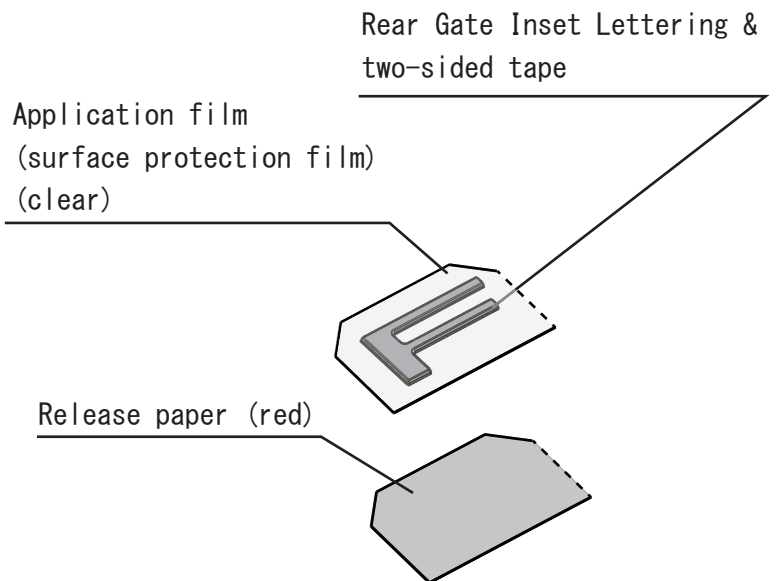


③ Do not tear the perforation until just before placing the Rear Gate Inset Lettering on the vehicle.

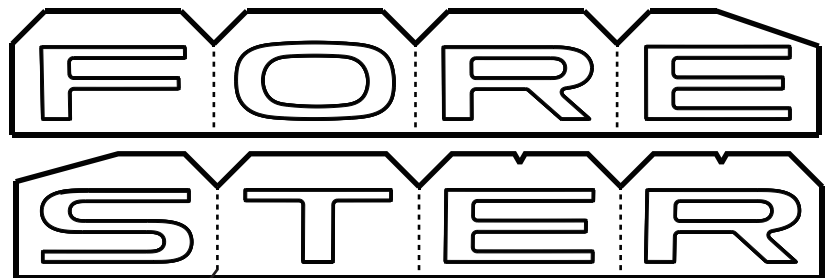


Perforation

Installation Instructions

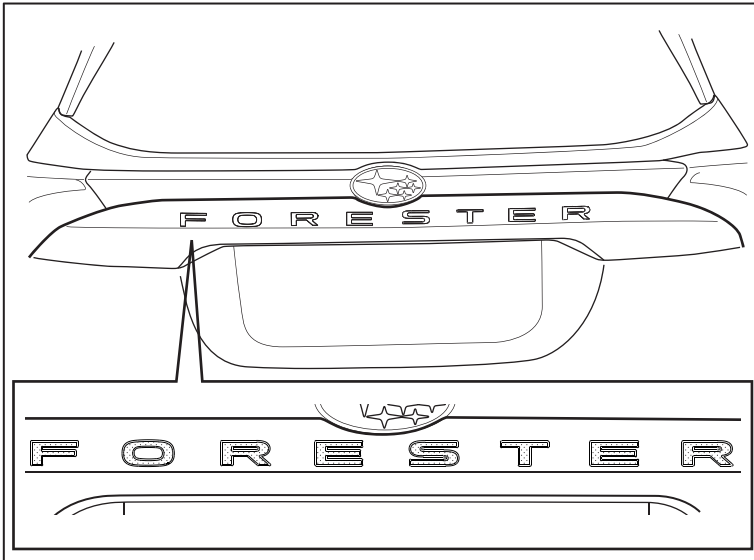


[①Rear Gate Inset Lettering surface side]

Press down firmly

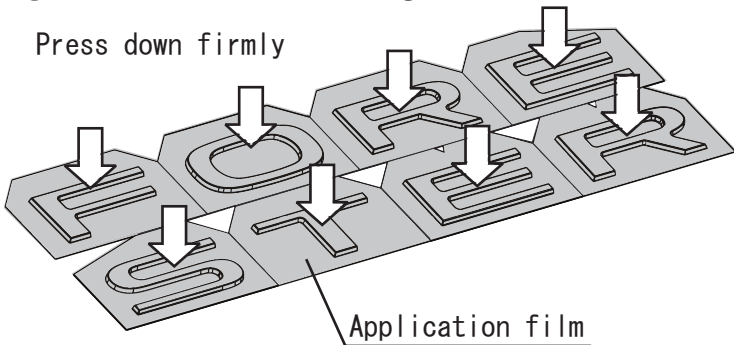

Perforation

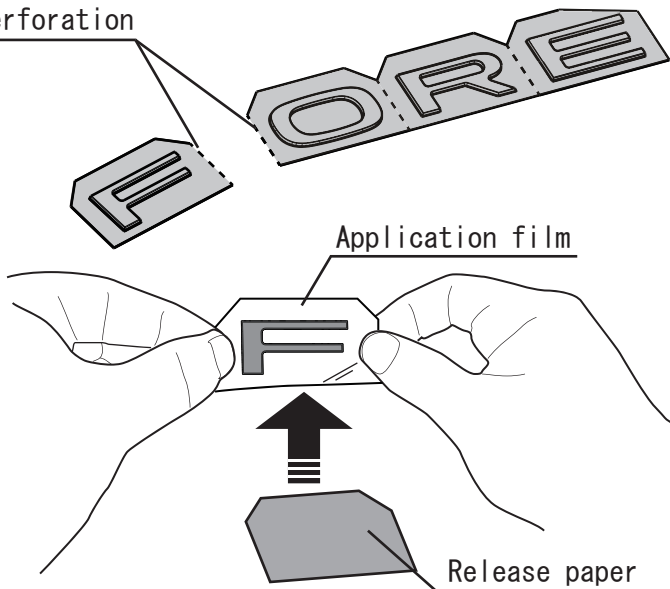

(1) Thoroughly degrease the recessed lettering area of the ①Rear Gate Inset Lettering installation surface (F O R E S T E R) with a degreasing agent, etc.


(2) Press down firmly on the application film so that the ①Rear Gate Inset Lettering is securely adhered to the application film.

(3) Remove only one letter at the perforation, peel off the release paper, and hold the application film side with both hands.

⚠CAUTION


- Avoid touching the adhesive side of the ①Rear Gate Inset Lettering with your fingers. This can cause a decrease in the strength of the adhesive.
- Be sure to remove the next letter at the perforation only after affixing the letter before it.
Separating all of the letters from one another at the perforation can lead to incorrect placement of the letters.

[Measurement points]

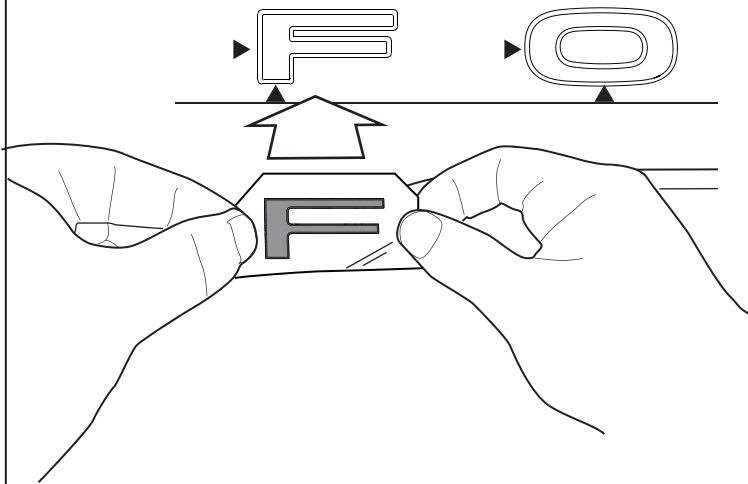


[Cross-section]

Affix the letters so that the spaces between the letters and recessed vehicle lettering are even.

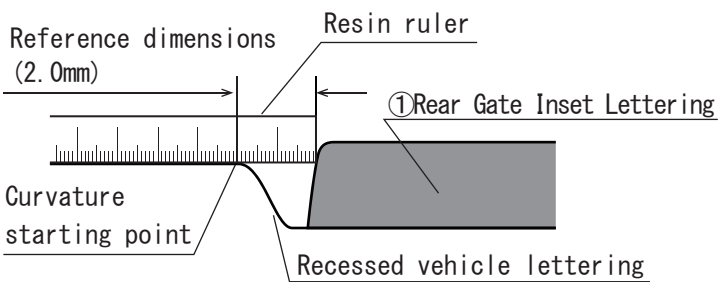

[After affixing]

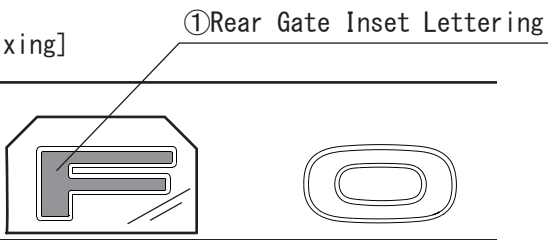

- (4) Affix the ①Rear Gate Inset Lettering so that the spaces between the letters and the recessed vehicle lettering are even, then press down firmly on the letters over the application film.


CAUTION

Affix the letters using pressure of 49N or more.

- (5) Repeat steps (3) and (4) with the remaining letters, affixing the ①Rear Gate Inset Lettering so that the spaces between the letters and the recessed vehicle lettering are even, then press down firmly on the letters over the application film.

CAUTION

[①Rear Gate Inset Lettering]

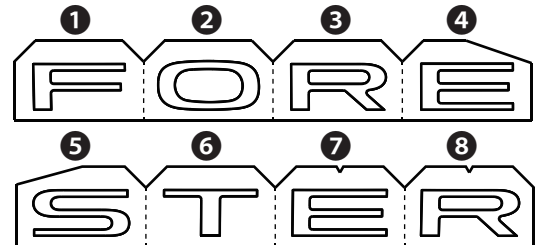

[Recessed vehicle lettering with the ①Rear Gate Inset Lettering affixed]



Affix the letters ①-⑧ in numerical order. Be sure to check for the presence of notches on ③ & ⑧ and ④ & ⑦ to ensure that they get placed in their respective proper locations. While they are the same letters, each letter is specifically designed to fit the shape of the vehicle, so please make sure to place them correctly.

- (6) Remove the application film from each letter of the ①Rear Gate Inset Lettering.

